

### **Solux Set-up Instructions**

Remove the back of the remote control to expose the P2 button.

Use a straightened paper clip or similar sized tool to press the motor program button.

### **To assign the transmitter to a Motor**

**Press and hold** the program button on the motor for 2 seconds.

The motor will shunt (up and down) and emit a 1 long beep.

Press the P2 button on the back of the remote, the motor will shunt and beep.

Press the P2 button again, the motor will beep.

Press the up button on the remote, the motor will shunt and then beep 6 times.

(The motor will now run in impulse mode, one press of the up or down will continuously operate the motor.

**You will need to press the stop button to stop the motor, as no limits are set).**

### **To Set the top and bottom limits (enter limit set up mode)**

Press P2 on the remote, the motor will shunt and beep.

Press the Up button, the motor shunt and beep.

Press P2, the motor will shunt and beep 4 times to show it is in limit setting mode.

#### **Top Limit Setting:**

Take the motor to the top limit by pressing the up button, then STOP at the required position.

Make adjustments up or down, then press and hold STOP- you will hear 4 beeps.

The motor will then shunt and beep again to show the limit has been set.

#### **Bottom Limit Setting:**

Press the down button and then STOP at the bottom position, make adjustments then press and hold STOP button until you hear 4 beeps.

The motor will then shunt and beep showing the set-up is no complete.

#### **\*Changing the Motor Direction.**

**Press and hold** the program button on the motor and wait until the motor has shunted up and down 3 times, then release the button. The motor will then beep 3 times confirming the direction has changed.

### **To Adjust the Limit Positions Once the Motor Has Been Set-up**

Take the motor to the required limit that needs to be adjusted and let the blind stop.

**Press and hold** the up and down buttons on the remote.

The motor will beep 4 times.

The motor will now operate in small steps to allow for finer adjustment.

Once the required limit is reached **press and hold** the stop button. The motor will beep 4 times, release the button and the motor will shunt and make 1 beep to confirm the limit has been adjusted.

### **To Lock Out the Radio Receiver (if using 1 channel for more than one motor.)**

Press and hold the program button on the motor until the motor shunt up and down twice then release. The motor beeps twice the receiver is switched off. Press the program button briefly to wake up the receiver.

### **Factory Reset.**

Press and hold the program button on the motor for 4 shunts up and down, then release the button. The motor will beep 4 times.

The motor is now back to factory settings with no transmitters and no limits set.

### **Deleting ALL Transmitters:**

Press P2 button inside transmitter 1 second

Press STOP button 1 second.

Press P2 button 1 second

### **To reduce motor speed:**

Press Down and stop buttons together for 2 seconds - motor makes some small movements

Motor now runs in slow mode

### **To revert to normal motor speed:**

Press Up & Stop buttons together for 2seconds - motor makes small movements and reverts to normal speed.