

Programming a transmitter to 2 channels

Press the white MEM/DEL button in the control panel 2 times and **hold** on the 2nd press – you will hear a long beep

Keep hold of the MEM/DEL button and at the same time press the selected button on your transmitter.

The long beep will change to a rapid beep – this means the channel is now programmed.

Release both buttons and test your transmitter

The channel chosen will operate open/stop and the other button as close/stop



Deleting all transmitters

Press the white MEM/DEL button in the control panel 5 times and **hold** on the 5th press – you will hear rapid beeps from the control panel.

Keep hold of the MEM/DEL button until you hear a long beep – this will take approx. 10 seconds.

When you hear the long beep take your finger off the button and make sure everything is deleted off

Wireless Keypad Instructions

PROGRAMMING THE KEYPAD TO THE RECEIVER – Mode 2 (open & close using 2 buttons)

Enter the code into the keypad.

Within 5 seconds, press the MEM button on the receiver twice keeping it held down

You will then hear a continuous beep

Whilst keeping hold of the MEM button press number 1 on the keypad

The continuous beep changes to a fast beep.

When you hear this the keypad has been programmed.

CHANGING CODE

Enter original code 12345

Now press M1 button (white button on the back of the keypad)

After the beep enter your new 5 digit code

Within 1 second of entering input the code in again.

When you hear a continuous beep for approx. 2 seconds this confirms the code has been changed.

PLEASE NOTE – AFTER 5 SECONDS OF ENTERING THE CODE AND MAKING A COMMAND THE KEYPAD WILL LOCK AGAIN AND YOU WILL HAVE TO ENTER THE CODE BEFORE DOING ANOTHER COMMAND

