

Deleting transmitters

Deleting 1 channel from a transmitter

Press the white MEM/DEL button in the control panel 4 times and **hold** on the 4th press – you will hear slow beeps from the control panel.

Keep hold of the MEM/DEL button and at the same time press the button on your transmitter you want to delete.

The slow beeps will change to a long beep – this means the channel is now deleted.

Release both buttons and make sure the channel is deleted.



Deleting everything off the control panel

Press the white MEM/DEL button in the control panel 5 times and **hold** on the 5th press – you will hear rapid beeps from the control panel.

Keep hold of the MEM/DEL button until you hear a long beep – this will take approx. 10 seconds.

When you hear the long beep take your finger off the button and make sure everything is deleted off

