

Motor limits and set up

Setting motor limits - using a test lead

Attach motor to a test lead

- Run motor as far down as it will go
- Attach the curtain
- Run motor up to as far as it will go
- Fine adjust using limit setting tool provided

Tip – Right hand motor


A = Top limit

B = Bottom limit

Tip – Left hand motor

A = Bottom limit

B = Top limit

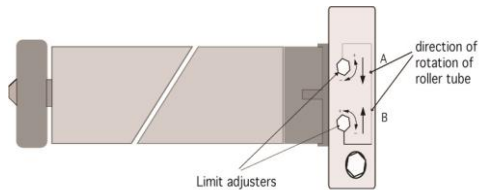

Disconnect the motor from test lead and connect it to your control panel



Wiring the motor into the control panel

Left Hand motor wiring

Black 5 – Blue 6 – Brown 7



Right Hand motor wiring

Brown 5 – Blue 6 – Black 7

