



## WIRELESS KEYPAD – Programming Instructions

### 1. PROGRAMMING THE KEYPAD TO THE RECEIVER – Mode 2(open & close using 2 buttons)

- Enter the code into the keypad.
- Within 5 seconds, press the MEM button on the receiver twice keeping it held down
- You will then hear a continuous beep
- Whilst keeping hold of the MEM button press number 1 on the keypad
- The continuous beep changes to a fast beep.
- When you hear this the keypad has been programmed.

### 1. CHANGING CODE

- Enter original code 12345
- Now press M1 button (white button on the back of the keypad)
- After the beep enter your new 5 digit code
- Within 1 second of entering input the code in again.
- When you hear a continuous beep for approx. 2 seconds this confirms the code has been changed.

**PLEASE NOTE – AFTER 5 SECONDS OF ENTERING THE CODE AND MAKING A COMMAND THE KEYPAD WILL LOCK AGAIN AND YOU WILL HAVE TO ENTER THE CODE BEFORE DOING ANOTHER COMMAND**